



1. Please check whether the spare parts are complete after opening the product package. If there is any defect, please contact the seller immediately.

2. The installation size of the purchased faucet should match the installation size of the embedded water inlet pipe.


3. The main part of the faucet has been inspected and debugged by the factory. Please do not disassemble or assemble by yourself, as it may affect the performance.

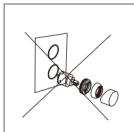

4. The faucet connected to the cold-hot water pipe must pay special attention to: hot water on the left, cold water on the right. If the connection is wrong, it will be the opposite of the red and blue identifier on the handle.

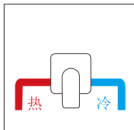

5. Before install the faucet, please be sure to remove impurities and dirt in the embedded pipe to avoid blockage and affect the water function.

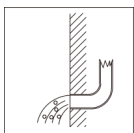


6. After installation, turn on the water supply, and then check whether the connections are tightly connected to ensure that there is no leakage.


7. The internal structure of the faucet contains silicone and other high-temperature components that can not be used under high temperature conditions, please do not use in water temperature of more than 90° for a long time.

8. Applicable water pressure: 0.05Mpa-0.75Mpa

1. The installation schematic diagram

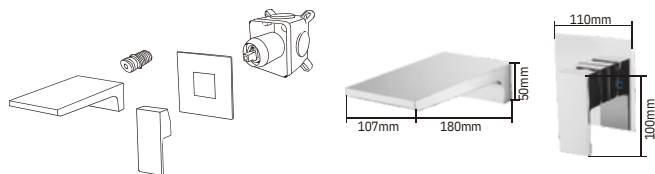

2. Water installation schematic diagram

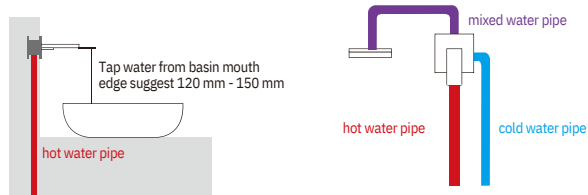

·Embedded box of the depth of the surface of ceramic tile, 65-75mm (recommended embedded depth is 70 mm)
 ·Bin paragraph dark outfit bibcock need in front of the ceramic tile with PPR inlet pipe into the wall

3. The wall/ceramic tile aperture

