 


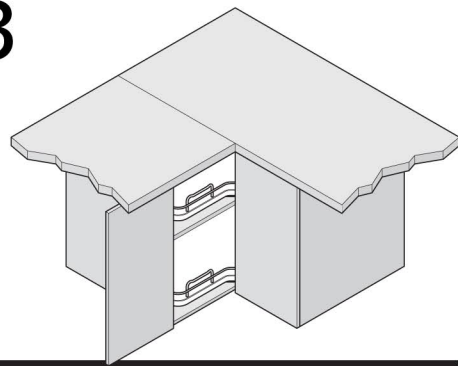


ART.363


Corner Carousel




 
Components

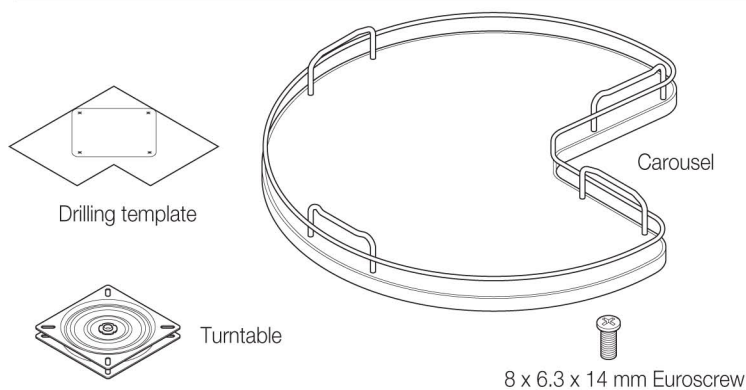

Tools required

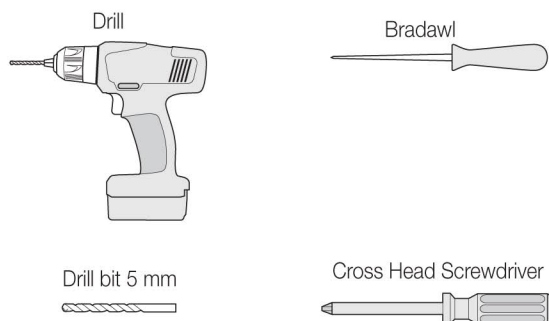 


  Please note: If you are fixing the carousel to the cabinet's shelf please ensure that the shelf has been fitted using the central fixing holes in the cabinet (see fig. 1 below), this will ensure you have enough room to easily fix the carousel to the shelf.

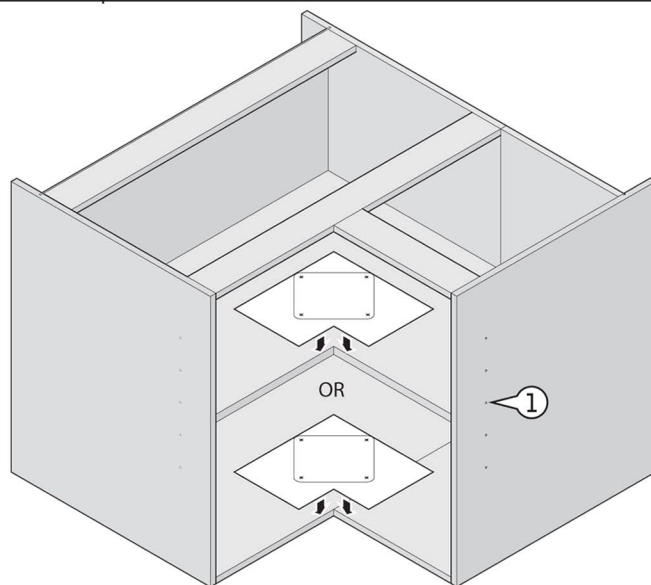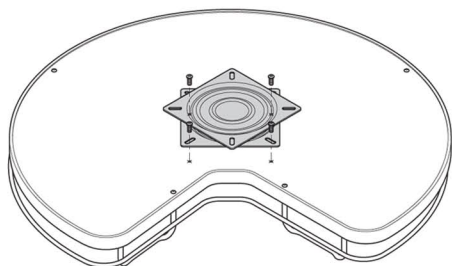


- 1 Fix the turntable to the underside of the carousel using the pre drilled holes and 4 x 6.3 x 14mm Euroscrews provided.

 
- 2 Position the drilling template on the desired shelf in the cabinet as shown above.

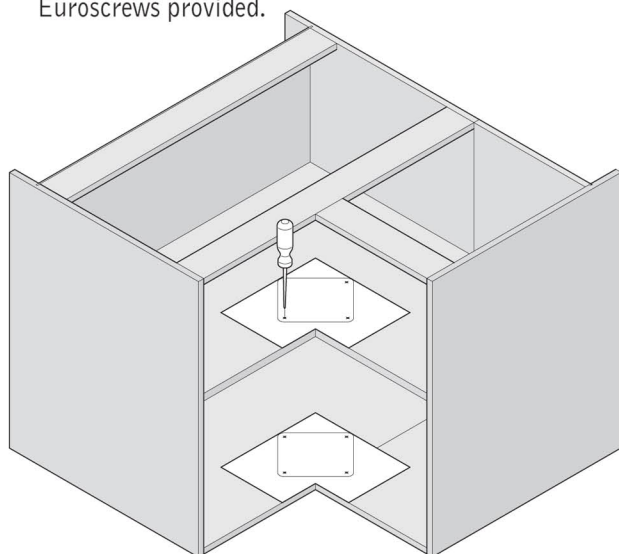

 
- 3 Using a bradawl mark the position of the fixing holes, then using a drill and 5 mm drill bit drill the fixing holes to a depth of 15 mm.

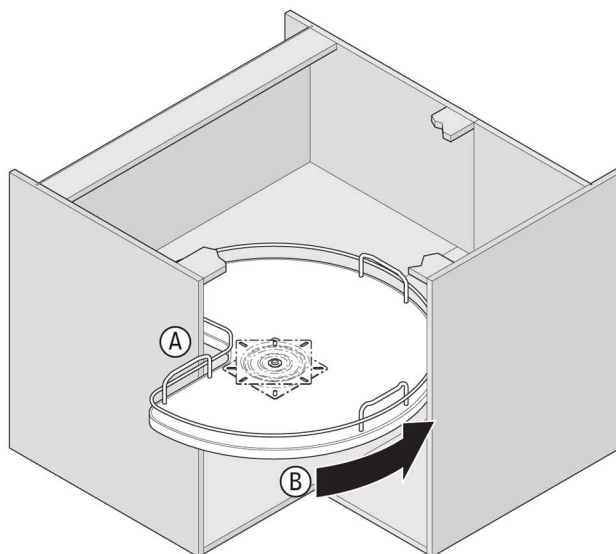

 
- 4 Place the carousel into the cabinet as shown in steps A and B above.

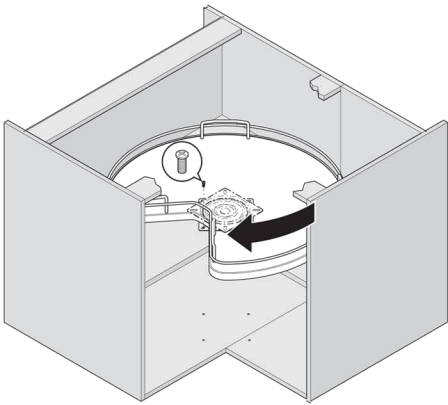

 
5 Line up the fixing holes with the bottom plate of the turntable as shown above, fix the first hole using 1 x 6.3 x 14 mm Euroscrew.

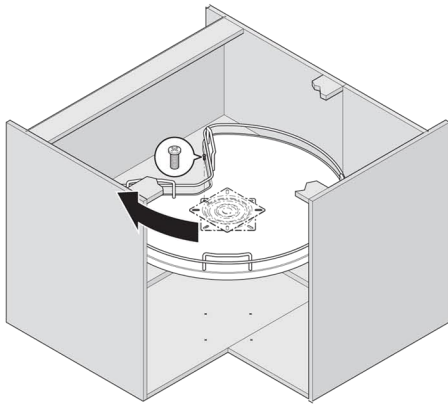

 
6 Carefully turn the crousel clockwise through 90° making sure the bottom plate of the turntable stays in position, fix the next hole using 1 x 6.3 x 14 mm Euroscrew.

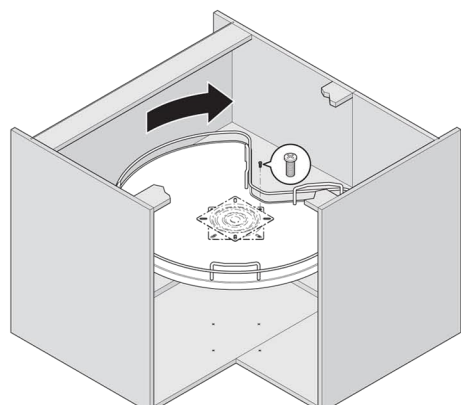


7 Repeat step 6.

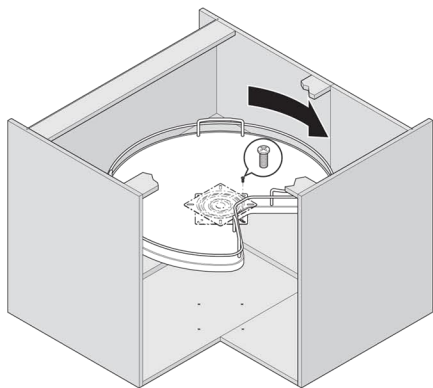 

8 Repeat step 6.

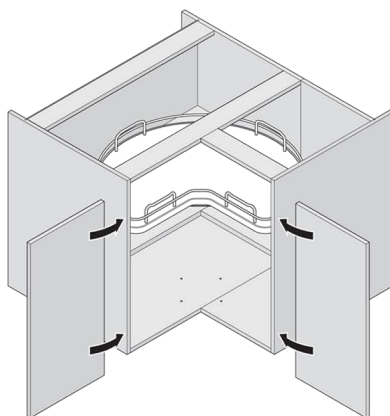 

 9 Fix the cabinet doors to the cabinet. If the carousel has been retro fitted into an existing cabinet, doors will already have been fitted.

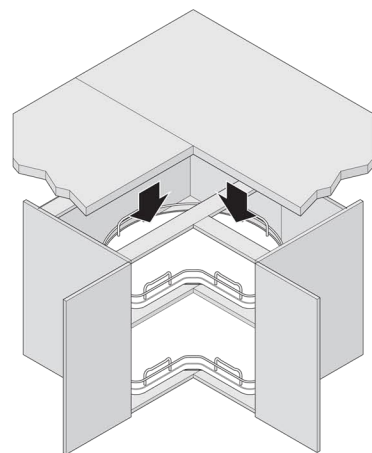

10 Fit worktops once the cabinet has been secured into place. If the carousel has been retro fitted into an existing cabinet, worktops will already have been fitted.

